

# Common Settings

- [Change your display refresh rate in Windows](#)
- [How to change audio playback medium in Windows](#)

# Change your display refresh rate in Windows



The refresh rate of a display is the number of times per second that the image refreshes on the screen. For example, a 60Hz display will update the screen 60 times per second.

Overall, the refresh rate determines how smoothly motion appears on your screen. For example, if you're playing a game that has a lot of fast-moving action, a higher refresh rate can help improve your overall gaming experience to keep up with the action. A higher refresh can also help you get a better experience with smoother motion when you're browsing the web or using a digital pen to write or draw.

A higher refresh rate can also reduce battery life because it uses more power. So if you're using a laptop or tablet and want to save some battery, you could lower the refresh rate. However, that might also reduce the overall experience when you're using your device.

# To change the refresh rate in Win 10

1. Select the **Start** button, then select **Settings** > **System** > **Display** > **Advanced display settings**.
2. Under **Refresh rate**, select the rate you want.  
The refresh rates that appear depend on your display and what it supports. Select laptops and external displays will support higher refresh rates.

## Windows 11

# To change the refresh rate in Win 11

1. Select **Start** > **Settings** > **System** > **Display** > **Advanced display** .
2. Next to **Choose a refresh rate**, select the rate you want.  
The refresh rates that appear depend on your display and what it supports. Select laptops and external displays will support higher refresh rates.

### Note:

You might see the word “**dynamic**” next to some refresh rates that are listed. **Dynamic** refresh rates will increase the refresh rate automatically when you’re inking and scrolling, and then lower it when you’re not doing these types of things. This helps to save battery and provide a smoother experience.

Please **DISABLE dynamic refresh rate**.  
Dynamic refresh rate will interfere with displaying images on the Smartboards

 


# How to change audio playback medium in Windows


## Windows 10

To change the Default Audio Device, do the following.

1. Click on the sound volume icon in the system tray.
2. Click on the up arrow in the sound flyout.

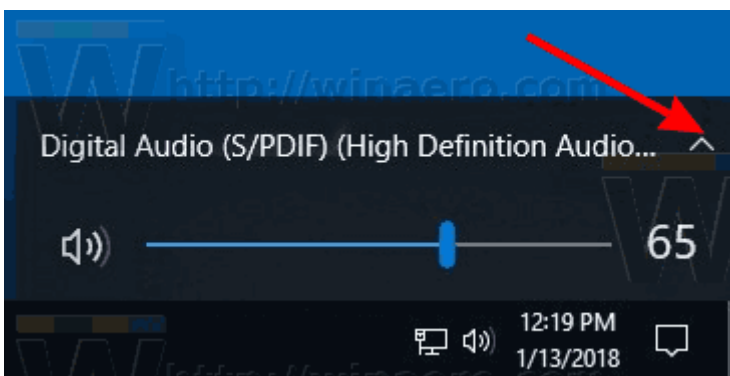

 3. Choose the desired audio device from the list.

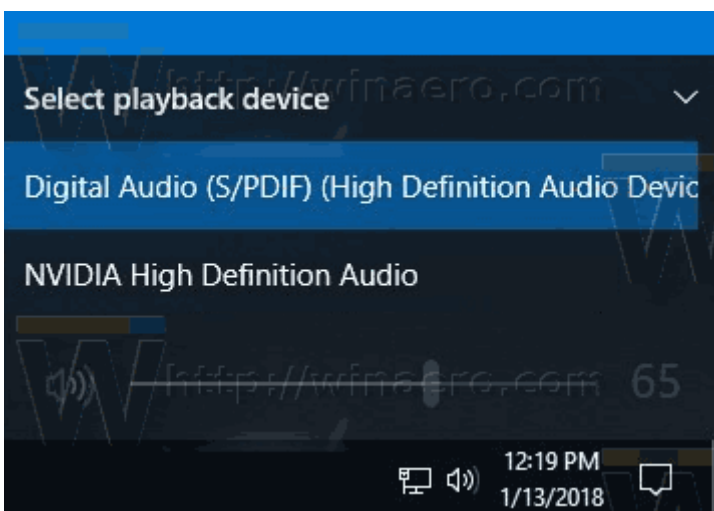

From <<https://winaero.com/change-default-audio-device-windows-10/>>